



 A DIVISION OF UES INTERNATIONAL

DRAWER SLIDE INSTALLATION GUIDE

Step 0: Before you begin

Make sure the following are present:

Tools: Tape Measure, Pencil, Ruler, Drill/Driver


Materials: Set of two Goliath Ball Bearing Full-Extension Drawer Slides sized to the inside depth of the cabinet.

Step 1: Measure and mark cabinet

Align drawer units to where you want them to be on the cabinet unit


With a pencil, measure and draw guides for the positioning of the drawer runners on the cabinet unit.

Do the same for the other side of the cabinet unit.

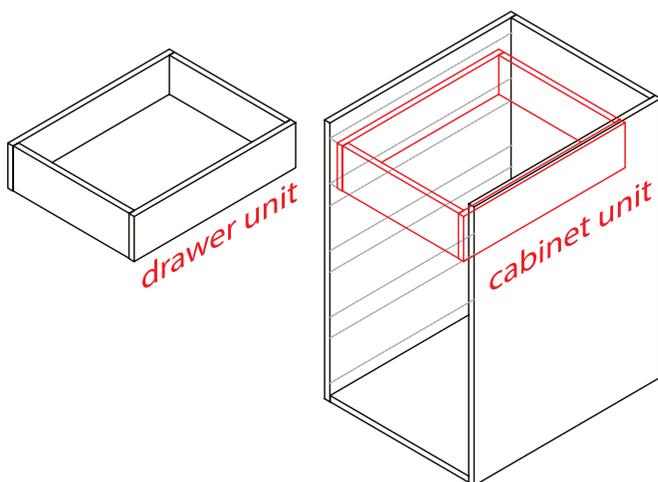

Step 2: Separating the internal member

Press lever to disconnect and separate internal member from the rest of the drawer slide. Do this for both drawer slides.

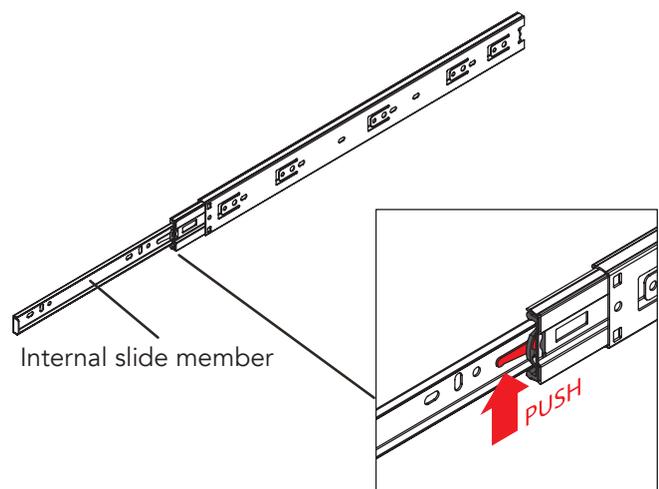


Step 3: Attaching the internal member to drawer unit

Install the internal member to the drawer member to the center of the side panel of your drawer unit.

Make sure both of the internal slide members are mounted vertically and horizontally parallel.

Use the vertical slots to fasten, this will allow you some room for error when adjusting the internal slide member.

The front end of the drawer slide should leave a maximum 2mm gap to the drawer fascia

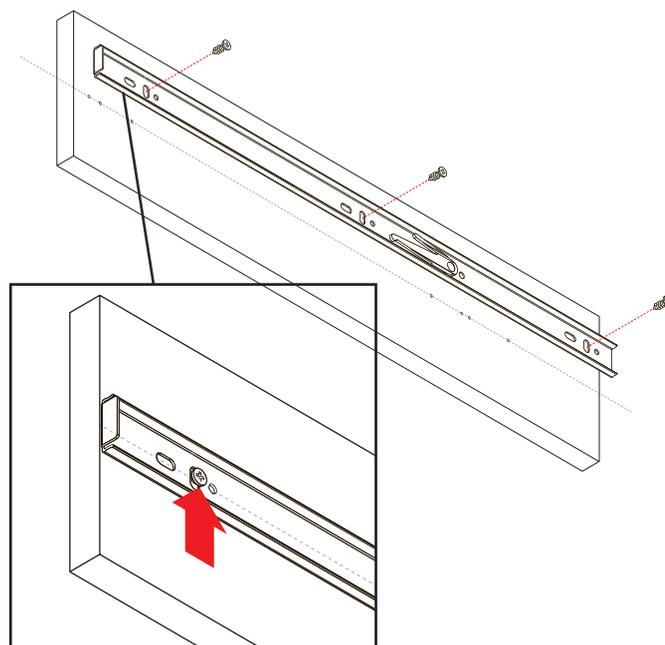


Step 4: Attaching the external members

Align external unit to center of marked lines of where your drawer unit will be.

Holding the slide firmly in place, push the inside extension forward until screw holes are visible.

Using the screws provided, mount the slide to the inside of the cabinet using the horizontal slots. Use as many screws as you feel is necessary for the unit, with 3 screws minimum

Repeat to mount the second drawer slide on the opposite side of the cabinet.

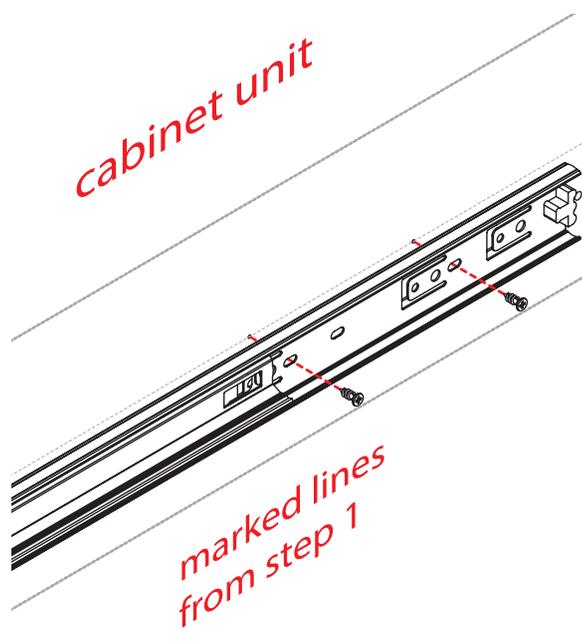

Step 5: Assemble drawer to cabinet

With the internal member attached to drawer unit and external member attached to cabinet unit, now it's time to place your drawer into the cabinet.

The drawer should slide in without issue. If the slide does not fit, unfasten screws slightly and adjust slide members to correct position.

Once this is done, repeat starting from step 1 for all remaining drawers.

